


## WIND GUARD ASSEMBLY

In this document, we will go over how to assemble the glass wind guard. You will need a flat surface where you have enough room to lay the panes of glass. A blanket is recommended. Two people are required to transport the wind guard safely. It is recommended to assemble the wind guard in the vicinity of the fire pit.


**TOOLS NEEDED:** Screw driver

**WARNING:** Tempered glass is very sensitive on the edges . Striking the edges will cause it to shatter.


---

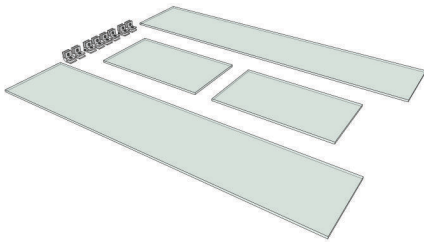


- 1.** In the package are the following:
- 4 Panes of Glass
  - 8 Corner Connectors 90°
- Please contact us if any piece is missing.

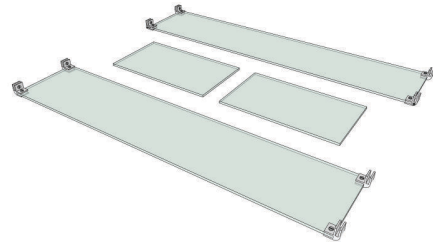


- 2.** To begin, attach the corner connectors onto the longer pieces of glass. Tighten the connectors with a screw driver. Do not over-tighten, damage may occur.
- 

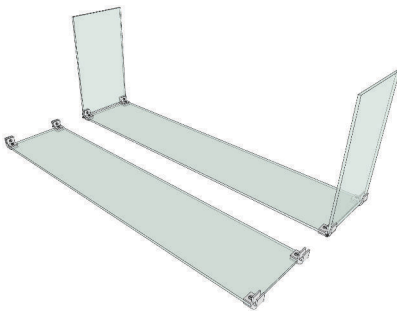


- 3.** On one piece, attach the shorter pieces of glass to create a "U" shape. Tighten the connectors.

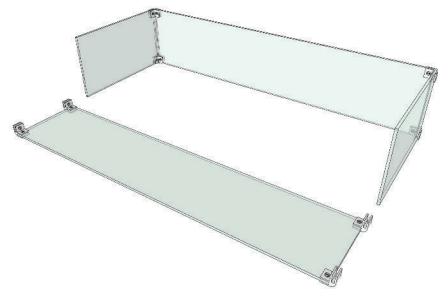

- 4.** Now that you've connected the three pieces together, turn it over so that it is upright. Now grab the sole remaining piece and connect it to the rest of the unit.
- 

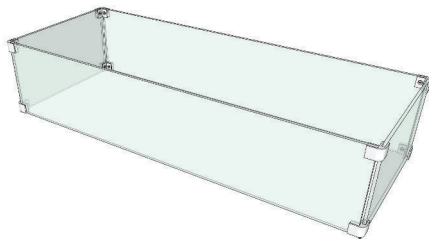

- 5.** Now that you've connected all 4 pieces, inspect each corner connection and ensure each piece is tight and secure.

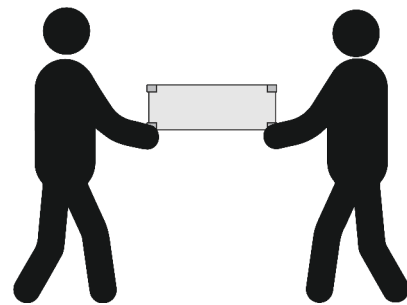

- 6.** To transport, grab the underside of the each corner.